



Vacuum Gauge 605

TestProducts International, Inc.



The Value Leader

E. MEASUREMENT TECHNIQUES

1. Attach the 605 to the system to be evacuated.
2. Select the desired unit of measure.
3. Start the vacuum pump and proceed to evacuate the system.

Please note: The 605 will not start to display a reading until 12,000 microns (-29.4 inHg) is reached.

Microns	InHg below ATM
12000	29.47
10000	29.53
8000	29.69
4000	29.76
2000	29.84
1000	29.88
500	29.90
300	29.91
200	29.91
150	29.92
100	29.92
50	29.92
0	29.92

F. ACCESSORIES

<u>Item #</u>	<u>Description</u>
A009A	9 Volt Alkaline Battery
A100	Soft Carrying Pouch

E. MEASUREMENT TECHNIQUES

1. Attach the 605 to the system to be evacuated.
2. Select the desired unit of measure.
3. Start the vacuum pump and proceed to evacuate the system.

Please note: The 605 will not start to display a reading until 12,000 microns (-29.4 inHg) is reached.

Microns	InHg below ATM
12000	29.47
10000	29.53
8000	29.69
4000	29.76
2000	29.84
1000	29.88
500	29.90
300	29.91
200	29.91
150	29.92
100	29.92
50	29.92
0	29.92

F. ACCESSORIES

<u>Item #</u>	<u>Description</u>
A009A	9 Volt Alkaline Battery
A100	Soft Carrying Pouch