PAL Refractometer

How to Use

Zero-setting

Water

ZERO

20.4℃
000

Measurement

Sample

START

20.4℃
12.3

Error Messages

Lo	**AAA**	**LLL**	**HHH**
Low Battery	Zero Set Fault	Too low / Sample not enough	Out of range (too high)
nnn	**LLL℃ 12.3**	**HHH℃ 12.3**	**EEE**
Too bright	Temp. error (too low)	Temp. error (too high)	Malfunction
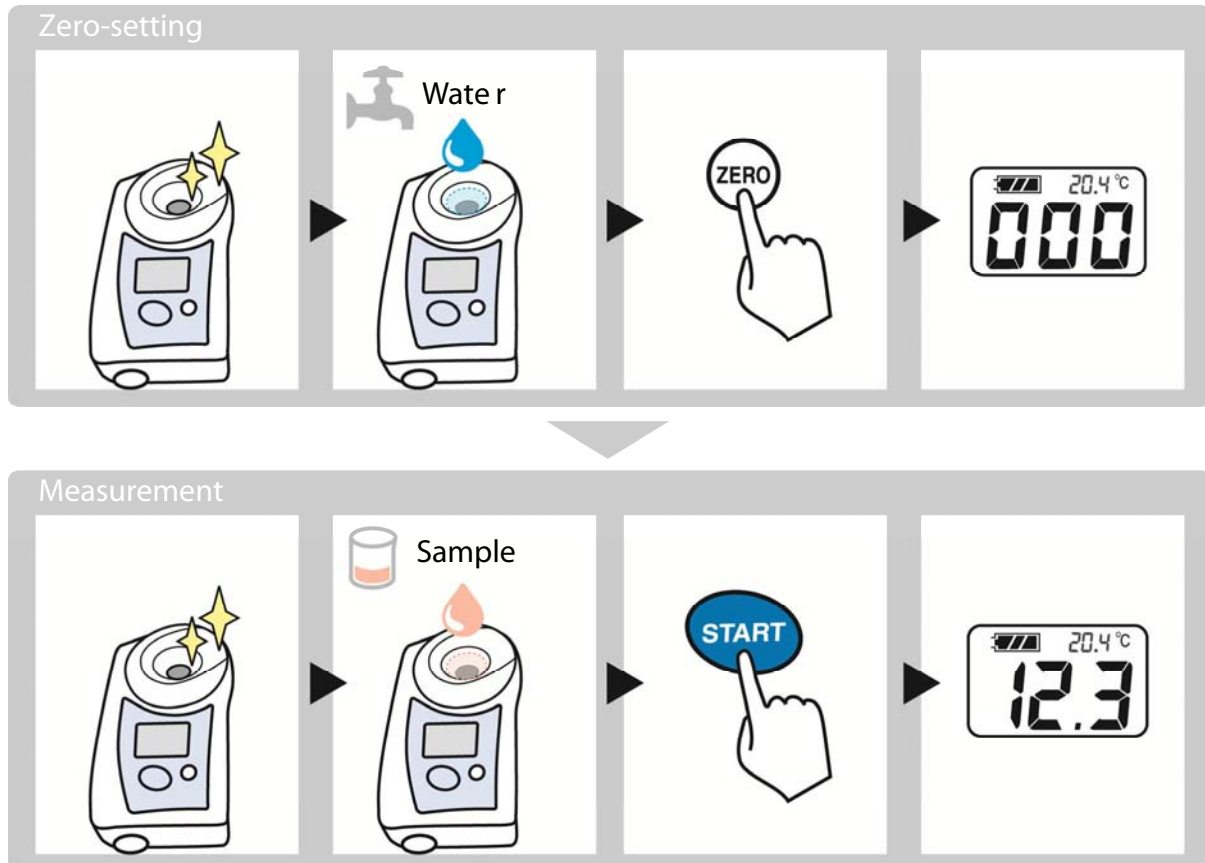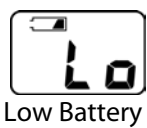
Attention

*Thoroughly wash and dry after use.
*Clean oily residues with alcohol or soap.

ATAGO CO.,LTD.