



# FLIR SCION®

## Quick Start Guide

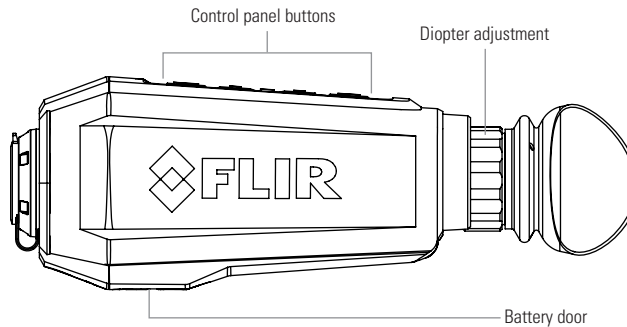


### BATTERY INSTALLATION

1. Open battery door by turning door latch 90 degrees
2. Remove battery tray
3. Install 2, 4, or 6 CR123 batteries in tray following proper polarity
4. Install tray inside battery compartment
5. Securely close battery compartment with screw latch

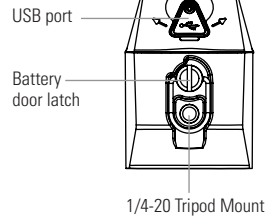

### USB ACCESS

1. Twist USB cover to expose port
2. Connect USB connector to the port

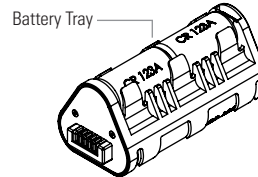

### CONTROL PANEL BUTTONS

#### POWER BUTTON


- SHORT press - Cancel/Exit (in menu)
- LONG press - Power ON/OFF

#### UP ARROW

- SHORT press - Zoom IN (step)
- LONG press - Zoom IN (progressive)

#### MENU BUTTON

- SHORT press - View mode change
- LONG press - Launch internal menu



#### DOWN ARROW

- SHORT press - Zoom OUT (step)
- LONG press - Zoom OUT (progressive)

#### FLEX BUTTON

- SHORT press - Image capture
- LONG press - Video record START/STOP



## ACCESS USER MANUAL

Product documentation and user manual are stored on the internal memory for your convenience. To access the user manual:

1. Power unit ON
2. Connect unit to PC or MAC via USB
3. Browse to internal storage location
4. Open desired user guide

## CHANGING VIEW MODES

Short press MENU button to cycle through different view modes

### 1. FULL mode

- Minimal overlay for best situational awareness



### 2. Picture-in-Picture (PiP)

- 2x zoomed-in view of center area
- Sample area size: 160 x 120 pixels
- Display area size: 320 x 240 pixels



### 3. Lock Span mode


- Auto Gain Control (AGC) is locked at current level to view rich details even in low dynamic range scenes
- Short press POWER button to lock and unlock AGC



## ACCESSING INTERNAL MENU

LONG press of MENU button to launch internal menu

1. Use UP / DOWN arrows to navigate menu
2. SHORT press MENU button to select option
3. SHORT press POWER button to exit

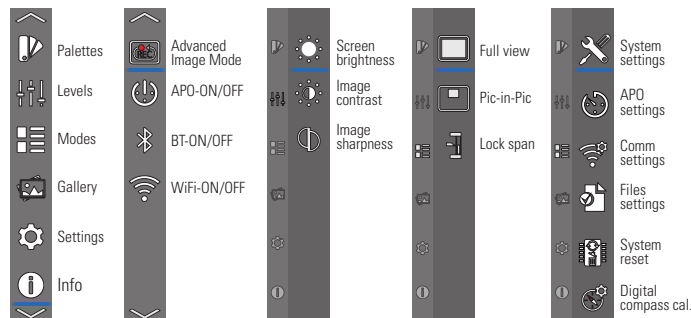

18-2715-OTS-FINAL\_V2

